

INSTALLATION INSTRUCTIONS

Before you start please read the instructions.
Planning your installation will save you time and effort.

FAILURE TO INSTALL APPLIANCES CORRECTLY IS DANGEROUS AND COULD LEAD TO PROSECUTION.

Installation should only be carried out by a qualified installer or engineer. We recommend that the appliance is connected by a competent person who is a member of a “Competent Person Scheme” who will comply with the required local regulations.

Our policy is one of constant development and improvement, therefore we cannot guarantee the strict accuracy of all of our illustrations and specifications. Changes may have been made subsequent to publishing.

Please keep to the following points most carefully;

Although every care has been taken to ensure this appliance has no sharp edges, we recommend that you wear protective gloves when installing and moving this appliance. This will prevent injury.

Ensure that you route all mains cables well clear of any adjacent heat source.

The space for air circulation, located underneath and at the back of the oven improves its reliability by ensuring that it will cool down, efficiently.

Installations should be carried out in line with the National Regulations applicable for this product type.

BEFORE INSTALLATION

IMPORTANT


If the oven is to work properly, the oven must be fitted correctly into a suitable Kitchen Cabinet. The kitchen cabinet housing for the oven must be made of a heat resistant material. Ensure that the glue and materials used in the oven cabinet housing can withstand temperatures of at least 120°C. Plastics or glues that cannot withstand such temperatures will melt and deform the unit. Once the oven has been fitted in the oven housing unit, all electrical parts must be completely insulated and all covers containing electrical connections must be firmly fixed into place so that it is impossible to remove them without using special tools. Remove the back of the kitchen unit to ensure an adequate current of air circulates around the oven. Ensure adequate ventilation is provided to any hobs above the oven we recommend a rear gap of at least 45mm.

FITTING THE OVEN INTO THE KITCHEN UNIT



The oven can be fitted either underneath a work top or into a tall oven housing cabinet. Fix the oven in position by screwing into place, using the two fixing holes in the frame. Two holes for the screws can be found by opening the oven door. To allow adequate ventilation, the measurements and distances specified in this manual need to be adhered to when fitting the oven in the housing unit.

INSTALLING THE APPLIANCE UNDER A WORKTOP



Where the appliance is installed under a worktop, with a hob fitted above it, the installation instructions for the hob must be read in conjunction with these instructions. When installing the appliance below a worktop, there must be a minimum ventilation area of 60cm² below the appliance, in either area (1) or (2), as indicated below. There must be a 2mm gap between the front top edge of the oven and the underside of the worktop.

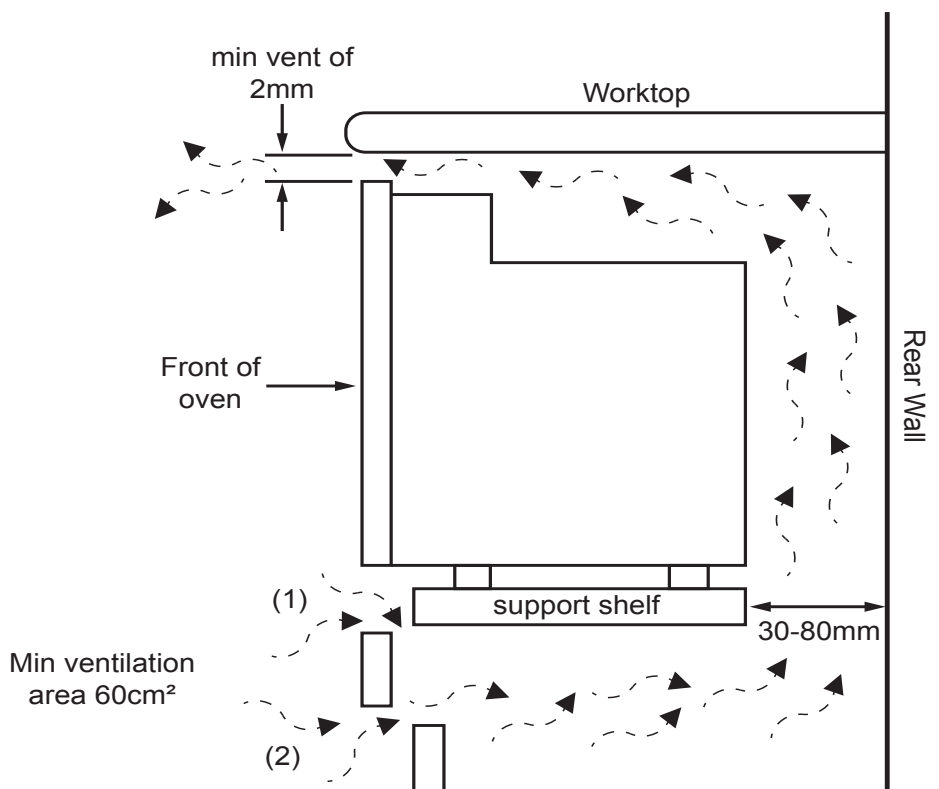

INSTALLING THE APPLIANCE

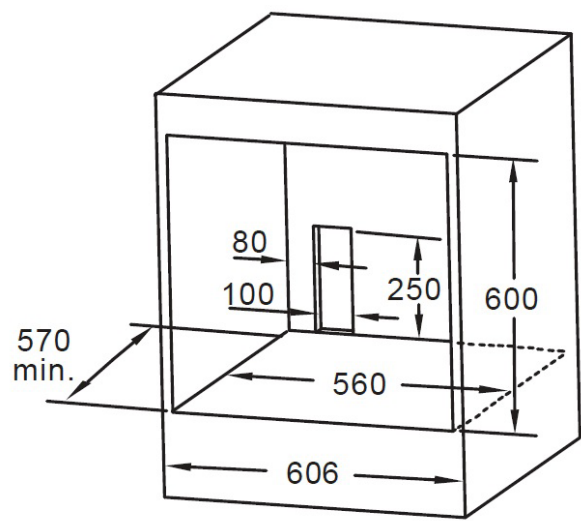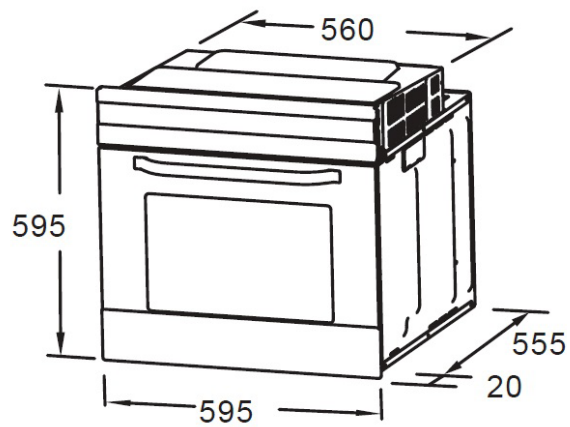


Note: Only install using dimensions greater than the minimum dimensions specified.

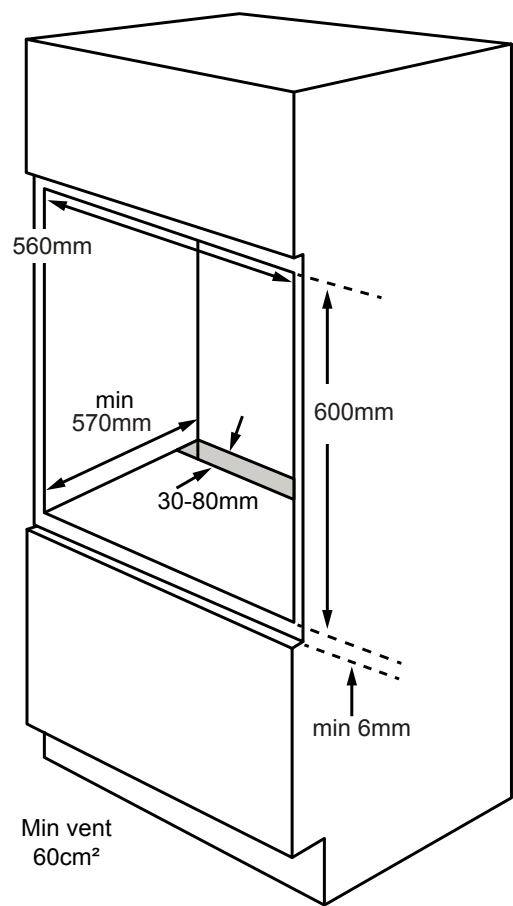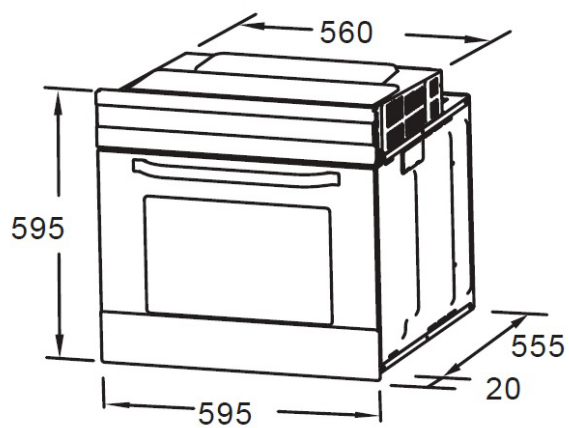

CONNECT TO THE ELECTRICITY SUPPLY

SECURING THE OVEN TO THE CABINET

1. Fit the oven into the cabinet recess.
2. Open the oven door.
3. Secure the oven to the kitchen cabinet with two spacers "A" fitted into the holes in the oven frame and fit the two screws "B" as shown below.

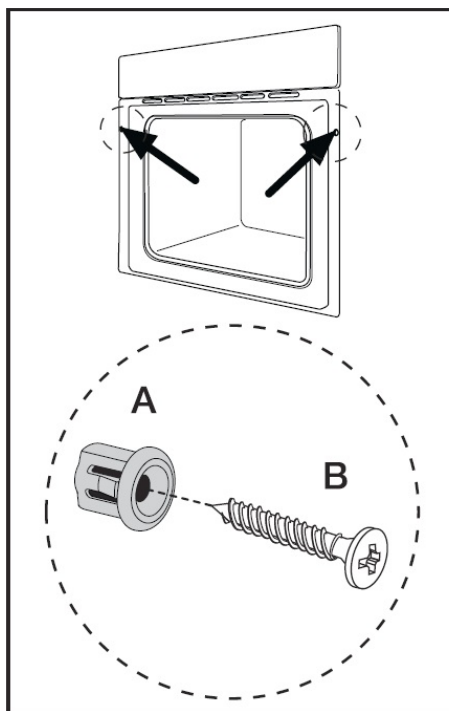

CONNECT TO THE ELECTRICITY SUPPLY

WARNING: This appliance must be earthed.

This appliance must be fitted to a switch providing all pole disconnection with a minimum capacity with 3mm minimum contact separation at all poles.

The appliance comes with a 3 core HO5 VV-F 1.5mm² Cable fitted to aid the installation

If this is not suitable please remove and use a suitable cable and ensure that the connection is made by a competent person.

Note: The terminal block screws and clamps can be damaged by excessive tightening and untightening. DO NOT USE POWER TOOLS!

1. Access to the mains terminal is gained by opening the terminal block cover at the rear of the appliance (use a small flat-bladed screwdriver).
2. First strip the wires, then push the cable through the cable clamp in the terminal block cover.
3. Connect the cable to the terminal block and tighten the cable clamp screw (see diagram below) Ensure that all screws are fully tightened.
4. Close the terminal box, ensuring that the cover is not loose and closed correctly.

