




Q900GRF DO

Double Rotostar Oven & Grill
For Natural Gas & LP Gas Models

User, Installation & Servicing Instructions



CONTENTS

User's Section	2 - 15
Introduction	2
Be Safe - Not Sorry.	5
Using the Maxigrill	6
Using the Top Oven	7
Using the Main Oven	8
Programmer / Clock	9
Cleaning.	13
Micro-computer Operation	15
 Installation Instructions.	 16 - 22
 Servicing Instructions	 23 - 30
 Technical Data	 31
 Stoves Customer Care	 32

If you smell gas:

- Do not try to light any appliance.
- Do not touch any electrical switch.
- Call the Gas Emergency Helpline at TRANSCO on:

0800 111999

Please keep this handbook for future reference, or for anyone else who may use the appliance.

INTRODUCTION

Thank you for choosing a British built appliance by Stoves

We hope the following information will help you to familiarise yourself with the features of the appliance, and to use it successfully and safely.

Our policy is one of constant development and improvement. Strict accuracy of illustrations and specifications is not guaranteed. Modification to design and materials may be necessary subsequent to publication.

This appliance must be installed in accordance with the regulations in force, and only in a well ventilated space. Read the instructions before using or installing this appliance.

The Q900GRF DO is designed to fit into a standard 600mm wide housing unit with a minimum internal height of 880mm.

The **User's Section** in this handbook covers the operation of the ovens and grill, but to help you make the most of your Stoves Q900GRF DO, we have produced the accompanying Cooking Guide, which gives more details of its features and benefits.

Your first year guarantee

To fulfil the conditions of your guarantee, this appliance must be correctly installed and operated, in accordance with these instructions, and only be used for normal domestic purposes.

Please note that the guarantee, and Service availability, only apply to the UK and Republic of Ireland.

Before using the appliance for the first time, remove any protective polythene film and wash the oven shelves and furniture in hot soapy water to remove their protective covering of oil. Even so, when you first switch on the oven or grill, you may notice a smell or some smoke.

To replace an oven light bulb

Switch off the electricity supply to the appliance at the socket, to avoid the risk of electric shock.

Wait until the oven is cool then remove the oven shelves.

The lens cover on the light can be removed by grasping the lens cover and pulling away from the side of the oven. Unscrew the bulb.

Please note that the oven light bulbs are not covered by guarantee. Replacement bulbs can be bought from most hardware stores.

INTRODUCTION

Gas & Electrical connection

Please refer to installation instructions for the Gas & Electrical Safety Regulations and the Ventilation Requirements.

In your own interest, and that of safety, it is the law that all gas appliances be installed by competent persons, who will ensure that the installation is in accordance with "The Gas Safety (Installation & Use) Regulations 1994", & the "The Gas Safety (Installation & Use) (Amendment) Regulations 1996". Failure to comply with these Regulations is a criminal offence.

Corgi registered installers undertake to work to satisfactory standards.

Disconnection of gas and electric appliances should always be carried out by competent persons.

Warning: This appliance must be earthed.

In the event of a power cut

1. Switch off the electricity to the appliance at the socket.
2. When the power returns, see the 'Programmer / Clock' section to 'Set the time of day'.

Condensation

When hot and cold air meet, condensation forms. The outer door is air cooled and the inner door gets hot, so some condensation might form; this is normal and will disappear within 10 - 15 minutes.

During operation, a metallic click may be heard occasionally. This is caused by the gas valve operating and is quite normal.

Ventilation

The use of a gas cooking appliance results in the production of heat and moisture in the room in which it is installed. Ensure that the kitchen is well ventilated; keep natural ventilation holes open or install a mechanical ventilation device (mechanical extractor hood).

Prolonged intensive use of the appliance may call for additional ventilation, for example opening of a window, or more effective ventilation, for example increasing the level of mechanical ventilation where present. This appliance is not connected to a products evacuation device.

It should be installed and connected in accordance with current installation regulations. Particular attention should be given to the relevant requirements regarding ventilation.

INTRODUCTION

Glass door panels

To meet the relevant Standards of Domestic cooking appliances, all the glass panels on this appliance are toughened to meet the fragmentation requirements of BS3193. This ensures that, in the unlikely event that a panel breaks, it does so into small fragments to minimise the risk of injury.

Please take care when handling, using or cleaning all glass panels as any damage to the surfaces or edges may result in the glass breaking without warning or apparent cause at a later date. Should any glass panel be damaged, Stoves strongly recommend that it is replaced immediately.

Ready lights

The ready lights are located in the control knob windows, below the indicator dial.

When the appliance is switched on, the red lights will come on.

A steady green light indicates when the selected oven or grill has reached a suitable temperature.

If the lights are flashing, refer to "Micro-computer Operation" section.

The *Gas Consumer Council* (GCC) is an independent organisation which protects the interests of gas users. If you need advice, you will find the telephone number in your local telephone directory under Gas.

Cooling fan

When you switch on the ovens or grill you will hear the cooling fan start. This fan provides air for the burners and keeps the exterior of the appliance cool during cooking, the appliance will not operate unless the fan is operating.

If the fan malfunctions the appliance will require servicing. The fan may continue to operate to cool the appliance for a few minutes after the last control has been switched off.

Environmental Protection

Stoves Limited is committed to protecting the environment and operates an Environmental Management System which complies with BS EN ISO 14001:1996.

Disposal of packaging

- All our packaging materials are recyclable and environmentally friendly.
- Please help us to protect our environment by disposing of all packaging in an environmentally friendly manner.
- Please contact your local authority for the nearest recycling centre.

Caution: Packaging materials can pose a risk of suffocation - keep away from children.

BE SAFE - NOT SORRY

When you are cooking, keep children away from the vicinity of the appliance.

This product is designed as a domestic cooking appliance for the preparation and cooking of domestic food products, and should not be used for any other purpose.

- Remove all packaging, protective films and oils from the appliance before using for the first time.
- Make sure you read and understand the instructions before using the appliance.
- Keep electrical leads short so they do not drape over the appliance or the edge of the worktop.
- Keep all flammable materials (such as curtains, furnishings & clothing) away from the appliance.
- Parts of the appliance may be hot during or immediately after use. Allow sufficient time for the appliance to cool after switching off.
- Never use the appliance for heating a room.
- Do not drape tea towels over the flue vents as this creates a fire hazard.
- When opening the appliance door, take care to avoid skin contact with any steam which may escape from the cooking.
- Do not use aluminium foil to cover the grill pan, or put items wrapped in foil under the grill as this creates a fire hazard.

- Do not use foil on oven shelves, or allow it to block the oven flue, as this creates a fire hazard, and prevents heat circulation.
- *Drop-down doors:* Do not place items on the door when open.
- Do not use the oven with the door inner glass panel removed.
- Use oven gloves when removing hot food / dishes from the oven or grill. The oven / grill and utensils will be very hot when in use.
- When cooking heavy items, eg; turkeys, do not pull the oven shelf out with the item still on the shelf.
- Switch off the electricity supply before replacing the oven light bulb, to avoid the risk of electric shock.

Warning: This appliance must be earthed.

All installation, servicing and maintenance work should be carried out by a competent person who will comply with current Regulations, Standards and Requirements.

When you have finished cooking check that all controls are in the off position.

As with all gas appliances, it is recommended that your appliance is serviced regularly.


USING THE MAXIGRILL

Caution: Accessible parts may be hot when the grill is used. Young children should be kept away.

Grill ignition

Open the grill door. Turn the *Top Oven / Maxigrill* control knob clockwise to the grill setting.

The grill door must be fully open when the grill is used. If the door is closed the grill burner will go out. The grill will re-light when the door is opened again.

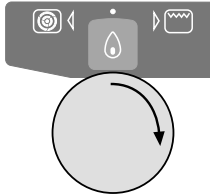

There is a short delay before ignition whilst the cooling fan speeds up - this may be for several seconds.

To switch off, return the control knob to the "off" position.

Note that the grill will not function when the appliance is set for automatic cooking.

Caution:

Never cover the grill pan or trivet with cooking foil or allow fat to build up in the grill pan, as this creates a fire hazard.

Do not use the grill if the grill burner glass is cracked.

Preheating


For best cooked results, the grill should be preheated until the green ready light appears (about 3 minutes).

Detachable grill pan handle

Place the handle over the edge of the grill pan. The handle should be removed from the pan during grilling, to prevent overheating.

The handle is designed for removing / inserting the grill pan under the grill when grilling.

If cleaning the grill pan when it is hot, use oven gloves to move it. Do not use the handle to pour hot fats from the

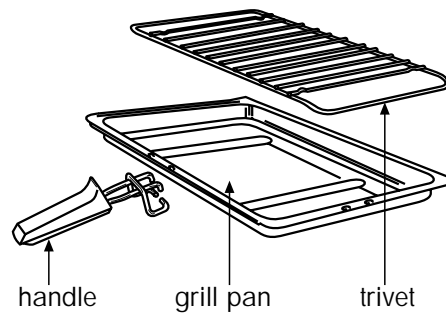

The grill trivet

Food for grilling should be placed within the area defined by the kinks in the trivet wires.

To suit the type of food, the grill trivet, which is in the grill pan, can be inverted to give a high or low position, or it may be removed completely.

USING THE TOP OVEN


When you are cooking keep children away from the vicinity of the oven.

The top oven can be used generally, in the same way as the main oven, to cook the full range of dishes, but it is a **SECONDARY** oven and there are some differences.

Please refer to the accompanying '**Cooking Guide**' for cooking in the top oven.

Top oven ignition

Turn the *Top Oven / Maxigrill* control knob anticlockwise to the required gas mark.

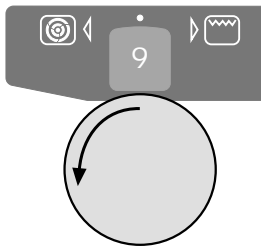

There is a short delay before ignition (up to 10 seconds) as the cooling fan builds up pressure.

The top oven burner will not come on unless the oven door is closed.

To turn off, return the control knob to the "off" position.

Oven shelves

The oven shelf must be positioned with the upstand at the rear of the oven and facing upwards.

Position baking trays and roasting tins on the middle of the shelves, and leave one clear shelf position between shelves, to allow for circulation of heat.

Baking tray and roasting tins

For best cooked results and even browning, the maximum size baking trays and roasting tins that should be used are as follows;

Baking tray 350mm x 280mm

This size of baking tray will hold up to 20 small cakes.

Roasting tin 370mm x 320mm

We recommend that you use good quality cookware. Poor quality trays and tins may warp when heated, leading to uneven baking results.

Note:

As part of the cooking process, hot air is expelled through a vent at the top of the oven(s). When opening the oven door, care should be taken to avoid any possible contact with potentially hot air, since this may cause discomfort to people with sensitive skin. We recommend that you hold the underneath of the oven door handle.

USING THE MAIN OVEN


When you are cooking keep children away from the vicinity of the oven.

Manual operation

The oven cannot be used manually when the programmer is set for automatic cooking; if **A** (AUTO) is showing on the programmer display, press the **⌘** cook time and **⌘** ready time buttons simultaneously to cancel the automatic setting.

Main oven ignition

Turn the control knob anticlockwise to the required gas mark.

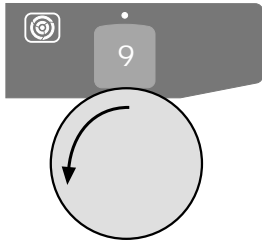

To turn off, return the control knob to the "off" position.

Automatic operation

See 'Programmer / Clock' section. Please refer to Cooking Guide for important instructions for automatic cooking.

We recommend that 15 minutes is added to the cooking time when using the automatic cooking facility, to allow for preheating.

Oven light

All oven lamps will light when an oven is in use.

Baking tray and roasting tins

For best cooked results and even browning, the maximum size baking trays and roasting tins that should be used are as follows;

Baking tray 350mm x 280mm

This size of baking tray will hold up to 20 small cakes.

Roasting tin 370mm x 320mm

We recommend that you use good quality cookware. Poor quality trays and tins may warp when heated, leading to uneven baking results.

Oven shelves

The oven shelf must be positioned with the upstand at the rear of the oven and facing upwards.

Position baking trays and roasting tins on the middle of the shelves, and leave one clear shelf position between shelves, to allow for circulation of heat.

Note:


As part of the cooking process, hot air is expelled through a vent at the top of the oven(s). When opening the oven door, care should be taken to avoid any possible contact with potentially hot air, since this may cause discomfort to people with sensitive skin. We recommend that you hold the underneath of the oven door handle.

PROGRAMMER / CLOCK

The Programmer Buttons

- 🔔 minute minder
- 🕒 cook time
- 🕒 ready time
- minus
- + plus


To set the "Time of Day"

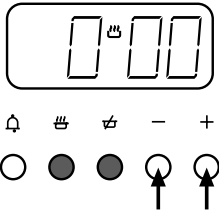

Press the *cook time* and *ready time* buttons simultaneously, and keep the buttons depressed. Use the *plus* and *minus* buttons to set the time of day, eg; 12.00.

A (Auto) symbol goes out, cookpot symbol comes on.

To select an alarm tone

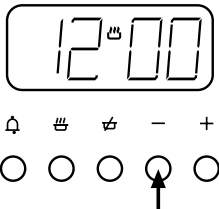


Press the *minus* button to listen to the first tone.

Release the *minus* button and press it again to listen to the second tone, etc.


Releasing the *minus* button after the tone has sounded will automatically select that tone.

Manual operation

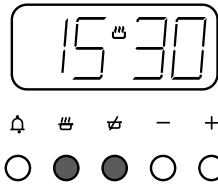

To set the programmer to manual operation at any time (cancelling any automatic setting), press the *cook time* and *ready time* buttons simultaneously. The programmer must be set to manual before the appliance can be used manually.

Setting the minute minder

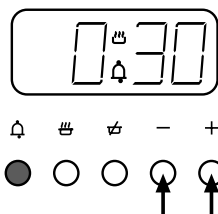

Press the *minute minder* button, then use the *plus* and *minus* buttons to set the required time.

The minute minder (bell) symbol will appear on the display.

You can cancel the minute minder at any time by pressing the *minute minder* button and the *minus* button until the display returns to 0.00.

After setting, the display will revert to show the time of day, but you can press the *minute minder* button, and the display will show the minutes remaining.

The tone will sound at the end of the time set - to cancel the tone, press the minute minder button.

PROGRAMMER / CLOCK

Semi-automatic cooking (example)

You have started cooking a meal or dish in the oven, and want to set the time for the oven to switch off.

Press the *cook time* button, then use the *plus* and *minus* buttons to set the display to show the length of cooking time required, eg; 2 hours as shown (1).

After setting, the display will revert to show the time of day, but you can press the *cook time* button and the display will show how much cooking time still remains on the clock.

Press the *ready time* button, and the display will show the actual time the oven is going to switch off, eg; 18.00 as shown (2).



At the end of the cooking time, the alarm will sound, and the oven will automatically switch off.

To switch off the alarm, press the *minute minder* button (3).


When the oven has switched off, **return the oven control knob to the "off" position**, and press the *cook time* and *ready time* buttons to return to manual operation (4).

If you wish to cancel the automatic setting, or to cancel any remaining cooking time left on the clock before the alarm sounds, press the *cook time* and *ready time* buttons simultaneously. (4).


1. A (Auto) symbol appears.

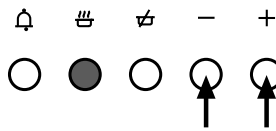


- 2.



3. A (Auto) symbol will flash.



4. A (Auto) symbol goes out.



PROGRAMMER / CLOCK

Fully automatic cooking (example)

For use when a delayed start time is required.

You want to set the length of cooking time, and the time for the oven to switch off. The programmer will automatically calculate the cooking start time.

Press the *cook time* button, then use the *plus* and *minus* buttons to set the display to show the length of cooking time required, eg; 2 hours as shown (5).

Press the *ready time* button, and the present ready time will be displayed. Using the *plus* and *minus* buttons you can set the display to show the actual time you want the oven to switch off, eg; 18.00 hours (6.00 pm) (6).


The display will revert to show time of day.

After setting the programmer, turn the oven control to the required temperature.


The oven will automatically switch on at the calculated start time of 16.00 hours (4.00 pm) (7).

A single press of the *cook time* button shows the cooking time remaining before the oven automatically switches off (8).


5. A (Auto) symbol appears.

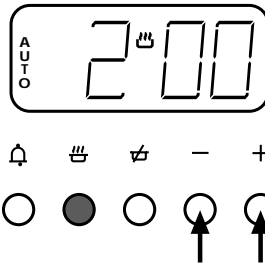


6. The cookpot symbol will disappear from display.

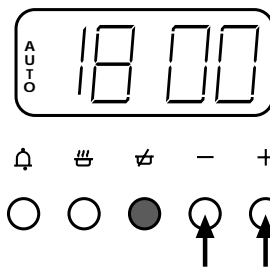

7. The cookpot symbol will appear on display.

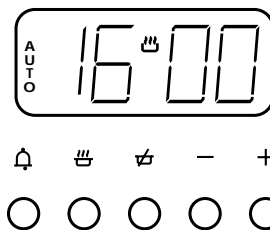


8.

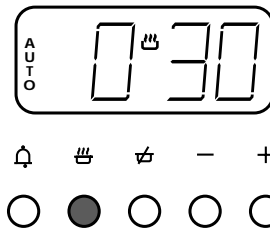

PROGRAMMER / CLOCK


The oven will automatically switch off at 18.00 hours (6.00 pm) and the alarm will sound (9).

9. A (Auto) symbol will flash.




To switch off the alarm press the *minute minder* button (10).

10.



When the oven has switched off, return the oven control knob to the "off" position, and press the *cook time* and *ready time* buttons simultaneously (11).

11. A (Auto) symbol goes out.



If you wish to cancel the automatic setting before cooking has started, and return to manual operation, press the *cook time* and *ready time* buttons simultaneously (11).

To cancel any remaining cooking time left on the clock before the alarm sounds, press the *cook time* and *ready time* buttons simultaneously (11).

CLEANING

Caution: Any cleaning agent used incorrectly may damage the appliance.

Always let the oven cool before cleaning.

Some cooking operations generate a considerable amount of grease. This, combined with spillage, can become a hazard if allowed to accumulate on the appliance through lack of cleaning. In extreme cases this may amount to misuse of the appliance and could invalidate your guarantee.

It is recommended that the appliance is cleaned after open roasting.

Do not use caustic pastes, abrasive cleaning powders, coarse wire wool or any hard implements, as they will damage the surfaces.


All parts of the appliance can be safely cleaned with a cloth wrung out in hot soapy water.

Chrome plated parts

OVEN SHELVES & OVEN SHELF RUNNERS,
GRILL PAN TRIVET

Do not use abrasives or polishes. Use a moist soap pad - eg; "Brillo". These items may also be cleaned in a dishwasher.

Note: Oven shelf runners can be removed for cleaning. Grasp the runners, and slide out of the hanging holes as shown.

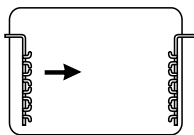

Vitreous enamel parts

GRILL PAN, OVEN FLOOR

Use a mild cream cleaner - eg; "Cif".

Stubborn marks may be removed with a moistened "Brillo" pad.

The grill pan may be cleaned in a dishwasher, or with a nylon brush in hot soapy water.

Painted, plastic & metal finish parts

DOOR HANDLE, CONTROL KNOBS

Only use a clean cloth wrung out in hot soapy water.

Easy care surfaces

OVEN SIDES AND BACK

We recommend that the appliance is cleaned after open roasting, and also after roasting at temperatures higher than gas mark 5, to help prevent a build up of fats. Use of a trivet in a roasting tin when roasting will help reduce fat splashing.

Caution: Most types of cleaning agent will damage these surfaces.

Only use a few drops of washing up liquid in hot water. Wipe the surfaces with a clean cloth wrung out in hot soapy water - if larger splashes of fat do not readily disappear, scrub the area with a nylon brush or nylon pan scourer and hot soapy water. Rinse well and heat the oven to dry the surfaces.


CLEANING

Glass parts

FACIA PANEL, OUTER & INNER DOOR GLASS PANELS

Use a mild cream cleaner - eg; "Cif". Rinse thoroughly and dry with a soft cloth.

Important: the inner door glass panel can be removed for cleaning but it must be replaced the right way up as shown (so the reflective side faces inwards), and pushed fully in to the **stop** position. To remove the glass panel, open the door wide, hold the top and bottom edges and slide out.

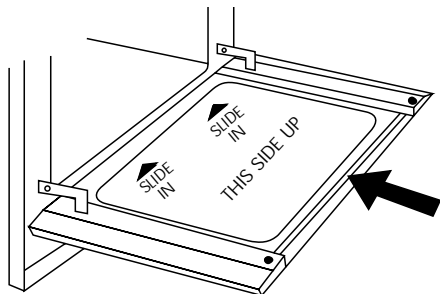

Ceramic grill glass

After using the oven or grill, wait until the grill glass is cool before giving it a quick wipe over.

Most splashes on the grill glass will burn off as the grill is used, but if necessary, it can be cleaned using a ceramic hob cleaner or a moist soap pad. When cleaning, do not exert excessive pressure on the grill glass.

For removing stubborn deposits, we recommend a ceramic hob scraper.

Stainless Steel surfaces (stainless steel finish models only)

FACIA PANEL, HANDLES, DOOR PANELS

Only use a clean cloth wrung out in hot soapy water, and dry with a soft cloth.

Stubborn marks can be removed using "Luneta". We recommend that you clean the whole of the stainless steel area to maintain a uniform finish. Supplies can be purchased from H.R.P.C. - contact direct sales order line ☎ 01772 819 672.

Do not use undiluted bleach or any products containing chlorides as they can permanently damage the steel.

Extra care should be taken when cooking food in salted water. Some foods are corrosive - eg; vinegar, fruit juices and especially **salt** - they can mark or damage stainless steel if they are left on the surface. Turn off and wipe any spillage immediately, taking care to avoid skin contact with any hot surface or spillage.

Sharp objects can mark the surface of stainless steel, but marks will become less noticeable with time.

To maintain the finish of the stainless steel, or to remove any greasy marks, wipe the stainless steel surface sparingly with a minimum amount of "Johnson's Baby Oil" and kitchen paper.

Do not use cooking oils, as these may contain salt, which can damage the stainless steel surface.

MICRO-COMPUTER OPERATION

Lamp signal	Cause	Action
Steady green	Selected oven / grill has reached required temperature.	None - normal operation.
Green lamp & red indicator dial of main oven cavity flash.	Soft lockout.	Reset - turn control knob off / on.
Green lamp & red indicator dial for both ovens flash alternately left / right.	Hard lockout. (possible interference)	Reset - turn off / on at mains. If recurring, a service visit may be required.
Green lamp & red indicator dial for both ovens flash together.	Fault on micro-computer	Service visit required.

The Q900GRF DO double oven & grill unit uses a built in micro-computer to control the oven temperature. The computer also indicates when the ovens are ready for use, and oversees the gas supply, fan operation and ignition sequence ensuring that these are operating safely.

Should the micro-computer find any fault in the systems under its control, it will either;

- stop the ignition and gas valve operation or;
- if the cooker is already in use it will shut down the operation until the fault is rectified.

The cooling fan will, however, continue to run on for a while, and the oven lights remain on.

Electrical interference either from the mains or other electrical equipment may cause the micro-computer to indicate a fault when non exists, chiefly when first turning on.

It may be necessary to reset the micro-computer (by turning the electricity supply off at the mains plug) when first bringing the appliance into operation.

Opening oven doors whilst the micro-computer is running through it's checks may cause it to lock out.

In the event of a power cut

1. Switch off the appliance at the socket.
2. When the power returns, see the 'Programmer / Clock section to 'Set the time of day'.

In the event of the gas supply being disconnected it may be necessary to make several lighting attempts before gas reaches the appliance.

INSTALLATION INSTRUCTIONS

Before you start: Please read the instructions. Planning your installation will save you time and effort.

Prior to installation, ensure that the local distribution conditions (nature of the gas and gas pressure) and the adjustment of the appliance are compatible. The adjustment conditions are stated on the data badge.

This appliance is not connected to a combustion evacuation device. It shall be installed and connected in accordance with current installation regulation. Particular attention shall be given to the relevant requirements regarding ventilation.

In your own interest and that of safety, it is the law that all gas appliances be installed and serviced by competent persons. CORGI registered installers undertake to work to satisfactory standards.

Where regulations or standards have been revised since this handbook was printed, always use the latest edition.

In the UK the regulations and standards are as follows:

1. Gas Safety Regulations 1996 (Installation and Use).
2. Building Regulations - Issued by the Department of the Environment.
3. Building Standards (Scotland) (Consolidated) - Issued by the Scottish Development Department.
4. The current I.E.E. Wiring Regulations.
5. Electricity at Work Regulations 1989.
6. BS 6172 Installation of Domestic Gas cooking Appliances
Also, for **LP Gas**, refer to BS 5482 Part 1, Part 2 or part 3 as relevant.
7. Installation & Servicing Instructions for this appliance.

For installation in countries other than the UK, the appliance must be connected in accordance with all local gas and electrical regulations.

Ventilation Requirements

The room containing the appliance should have an air supply in accordance with BS 5440: Part 2: 1989:

- All rooms require an openable window, or equivalent, and some rooms will require a permanent vent as well.
- For room volumes up to 5m³ an air vent of 100cm² is required.
- If the room has a door that opens directly to the outside, or the room exceeds 10m³, NO AIR VENT is required.
- For room volumes between 5m³ and 10m³ an air vent of 50cm² is required.
- If there are other fuel burning appliances in the same room, BS 5440: Part 2: 1989 should be consulted to determine the air vent requirements.
- This appliance must not be installed in a bed sitting room of less than 20m³ or in a bathroom or shower room.

Windows and permanent vents should therefore not be blocked or removed without first consulting a CORGI gas installer.

LP Gas only - Do not install this appliance in a room below ground level. This does not preclude installation into rooms which are basements with respect to one side of the building, but open to ground level on the opposite side.

Failure to install appliances correctly is dangerous and could lead to prosecution.

INSTALLATION INSTRUCTIONS

Step 1: Prepare installation

Do not lift the appliance by the door handle.

Remove the fixing screws from the polythene bag on the top of the appliance, but leave the appliance in the base tray packaging until you are ready to install it.

Whilst every care is taken to eliminate burrs and raw edges from this appliance, please take care when handling - we recommend the use of protective gloves during installation.

Please note that the weight of this appliance is approximately **48kg** (unpacked). Take care when lifting it into the housing unit - always use an appropriate method of lifting.

Note: When removing the appliance from the base tray packaging care should be taken to ensure the appliance is not damaged.

Siting the appliance

If this appliance is to be installed near to a corner where the adjacent cabinets run at right angles forward of the appliance, there must be a gap of at least 90mm between the appliance and the cabinets, to prevent overheating of the cabinets.


When installed in a typical 600mm deep built in housing unit, the false back should be removed from the housing unit, to provide the necessary depth for installation.

When the false back is removed, it is normally the case that the support shelf for the appliance leaves a gap between the back edge of the support shelf and the rear wall of approximately 80mm.

If no gap occurs between the back edge of the shelf and the wall behind the unit, you must create a gap of at least 30mm by shortening the shelf and any other shelf below the appliance.

Cut 12mm from the top of any plinth that may be fitted (see diagram).

Important: Do not modify the outer panels of this appliance in any way.

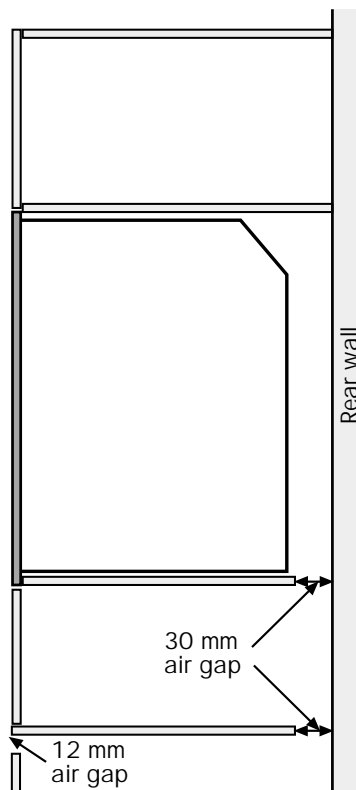


INSTALLATION INSTRUCTIONS

Dimensions

The appliance is designed to fit into a standard 600mm wide housing unit, with minimum internal dimensions as shown.

Note: All sizes are nominal, some variation is to be expected.

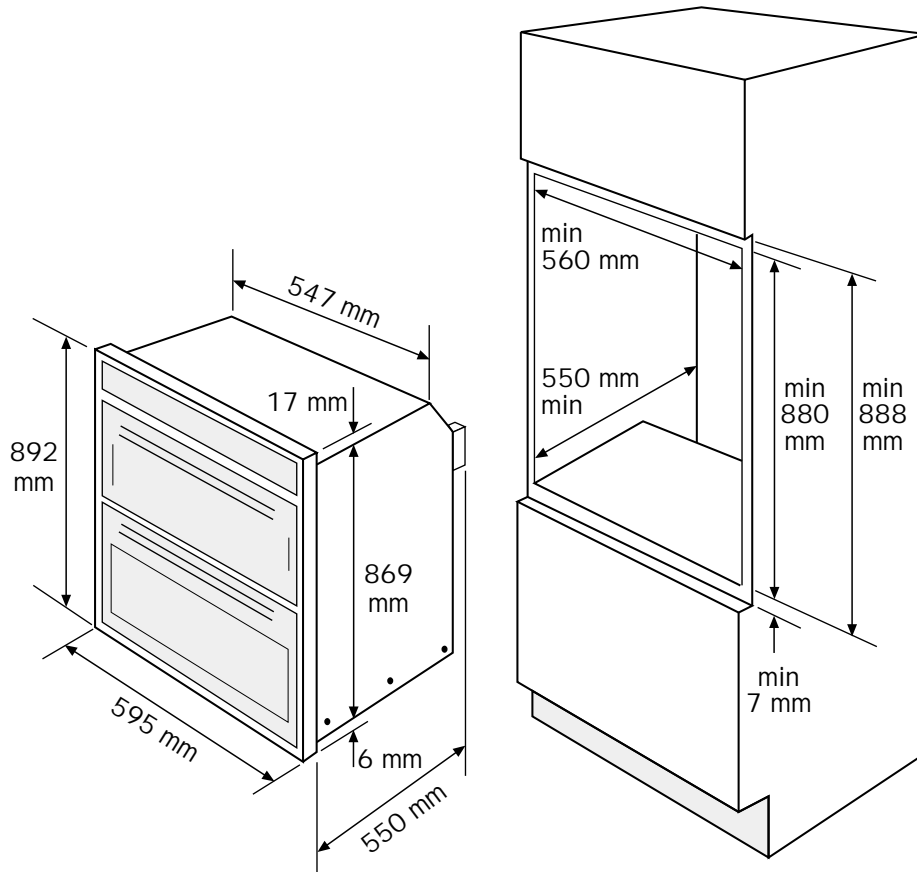

INSTALLATION INSTRUCTIONS

Step 3: Connect to the electricity supply

This appliance must be connected by a competent person, using fixed wiring via a double pole switched fused spur outlet, with a contact separation of 3mm at all poles.

We recommend that the appliance is connected by a qualified electrician, who is a member of the N.I.C.E.I.C. and who will comply with the I.E.E. and local regulations.

Warning: This appliance must be earthed.


The wires in the mains lead are coloured in accordance with the following code:

Green & Yellow = earth,

Blue = neutral,



Brown = live.

As the colours of the wires in the mains lead for the appliance may not correspond with the coloured markings identifying the terminals in your spur box, proceed as follows:

1. The wire which is coloured green and yellow must be connected to the terminal marked **E** (Earth)  or coloured green.
2. The wire which is coloured blue must be connected to the terminal marked **N** (Neutral) **LOAD** or coloured Black.
3. The wire which is coloured brown must be connected to the terminal marked **L** (Live) **LOAD** or coloured Red.

If the supply cord is damaged, obtain a special cord from the Customer Support Helpline, which must be fitted by a qualified person.


Typical example of a double pole fused spur outlet

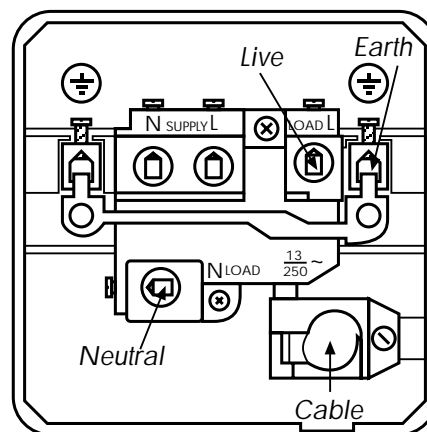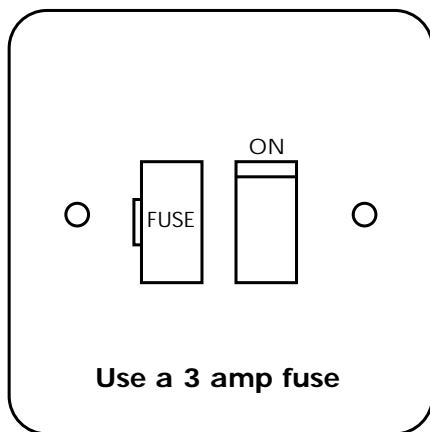

INSTALLATION INSTRUCTIONS

Step 3: Connect to the gas supply

1. The inlet to the appliance is $\frac{1}{2}$ " BSP internal situated at the rear top right corner.
2. Fit the bayonet connection to the wall in the shaded area as shown.

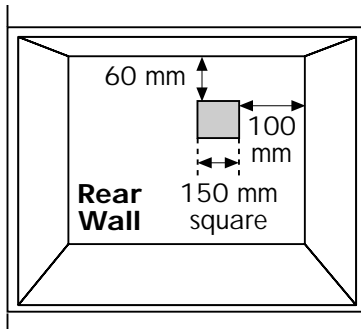

3. Use a 900mm - 1125mm length of flexible connector and make sure it does not block the fan inlet and cannot come into contact with moving parts of the cabinetry - eg; drawers and doors.
4. **Natural Gas** - Flexible connections should be to BS 669. Parts of the appliance likely to come into contact with a flexible connector have a temperature rise less than 70°C.

LP Gas - For flexible connections use a bayonet type hose, suitable for use on LP Gas up to 50 mbar pressure and 70°C temperature rise. The flexible hose should be coloured black with a red stripe, band or label. If in doubt, contact your supplier.

5. Rigid connections must be accessible to disconnect for servicing. Cut a 150mm square hole in the right hand rear corner of the support shelf for the supply pipe.
6. Make sure all connections are gas sound.

Important: - ensure that you route all mains and electrical cables and flexible tubing well clear of any adjacent heat source, such as an oven grill or hob.


Ensure that all pipe work is of the correct rating for both size and temperature.

INSTALLATION INSTRUCTIONS

Step 4: Check edging strip

The edging strip is factory fitted to the front side edges of the appliance front frame. This strip provides the cabinetry with extra protection from any escape of heat.

When installing the product, ensure that the edging strip is correctly located on the outer edges of the front frame, before positioning and securing the appliance to the cabinet.

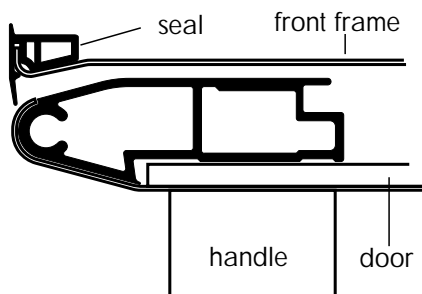

Step 5: Secure appliance into housing unit

Insert appliance into cabinet. *Note:* The unit housing the appliance must be appropriately fixed.

To secure the appliance to the housing unit, open the grill / top oven door and screw 2 screws through the top corner holes in the front frame, ensuring that the appliance is centrally located. Take care not to damage the appliance or cabinet.

When securing the appliance, the fixing screws provided are driven through the edging strips into the cabinet - the seal will straighten up and sit flush to the cabinet when the screws are fully home.

INSTALLATION INSTRUCTIONS

Step 6: Commissioning

Burner aeration

All burners have fixed aeration and no adjustment is possible.

Pressure setting

G20 Natural Gas @ 20 mbar

G30 Butane @ 28-30 mbar

G31 Propane @ 37 mbar

The pressure test point is on the top of the manifold inlet block.

Programmer

The programmer must be set to the time of day before the main oven can be used manually - see the 'Programmer / Clock' section to 'Set the time of day'.

Electrical Systems Check

In the event of an electrical fault, the preliminary electrical system check (earth continuity, short circuit, polarity and resistance to earth) must be carried out. There is also a Fault Finding Section in the Servicing Instructions.

Ignition

The automatic ignition continues to spark for a short time after the burner flame has lit until the flame is established.

Grill

1. The door must be open for the grill burners to ignite.
2. Turn clockwise to the grill setting.
3. Close the door and check that the burner goes out. The grill burner will re-ignite when the door is opened again.

Main Oven

1. The door must be closed for the oven burner(s) to ignite. The oven burner will go out when the door is opened but will re-light when the door is closed again.
2. Turn the oven control knob to the required setting.

Top Oven

1. Turn the control knob to the required setting.

Before leaving the installation

Show the customer how to ignite the oven and grill and give them this handbook.

Thank you.


SERVICING INSTRUCTIONS

Before servicing - Disconnect the gas and electrical supplies

After servicing - Check gas soundness

Wiring Diagram	24
Fault finding	25 - 27
1. Facia glass panel	28
2. Remove appliance from housing	28
3. Door glass panel(s)	28
4. Oven light bulb(s)	28
5. Top & Rear compartment access	28
6. Oven igniter electrode	28
7. Oven burner fan unit	29
8. Micro-computer	29
9. Door switch(es)	29
10. Cooling fan	29
11. Oven light fittings	29
12. Grill burner	29
13. Ceramic grill glass	29
14. Grill igniter electrode	29
15. Programmer / Clock	30
16. Solenoid block	30
17. Pressure switch	30
18. Door seal(s)	30

WIRING DIAGRAM

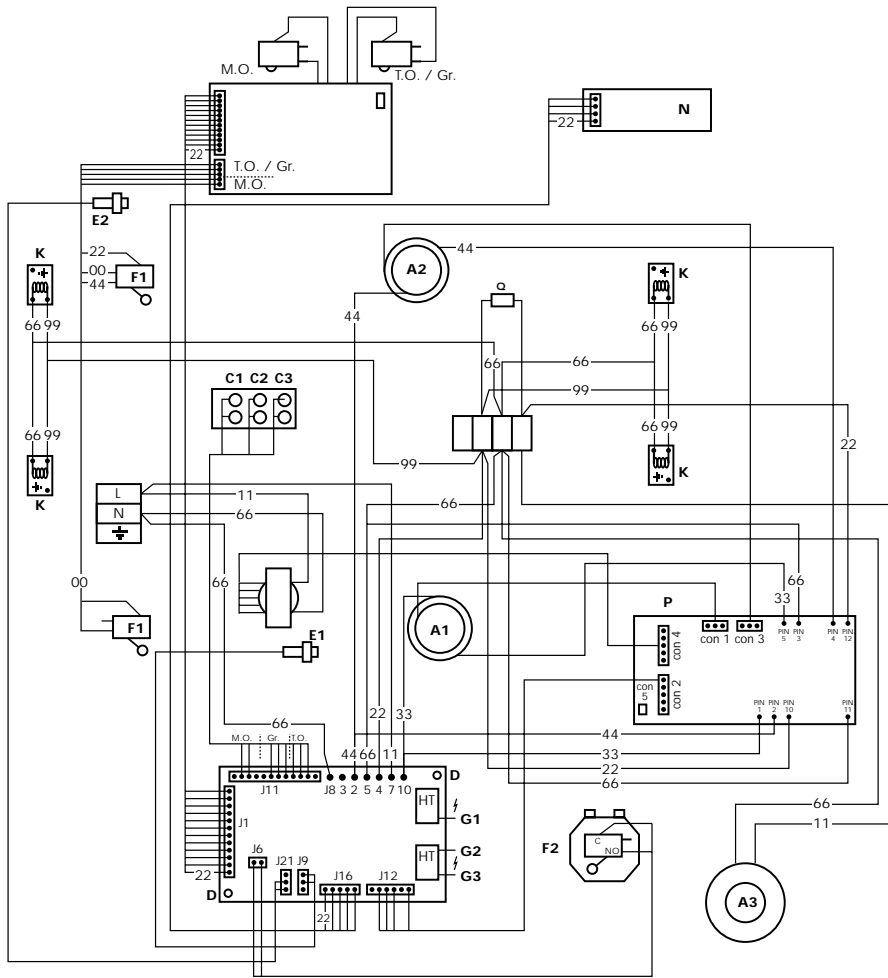

Key: **A1** - Main oven fan; **A2** - Top oven fan; **A3** - Cooling fan; **B** - Transformer; **C1** - Solenoids - grill; **C2** - Solenoids - main oven; **C3** - Solenoids - top oven; **D** - Earth screw, **E1** - Thermistor - main oven; **E2** - Thermistor - top oven; **F1** - Door switch; **F2** - Pressure switch; **G1** - HT - main oven; **G2** - HT - grill; **G3** - HT - top oven; **K** - Lamps; **N** - Programmer; **P** - Speed control, **Q** - 68Ω resistor (LPG 100Ω).

Wiring colour code: **00** - Black; **11** - Brown; **22** - Red; **33** - Orange; **44** - Yellow; **66** - Blue; **99** - White. *Note:* Earth wires (green) not shown.

FAULT FINDING

Method of operation

When the control knob is rotated from the 'OFF' position, a microswitch closes and allows the gas control solenoids to be energised; the same movement of the control rotates an electrical potentiometer and lights a red LED.

The micro-computer on the main control board uses the resistance set at the potentiometer to determine the user's requirements - ie; oven or grill and oven temperature asked for.

The oven temperature is sensed by a thermistor at the rear of the oven - the computer compares the electrical resistance of this with that set on the potentiometer, and controls burner accordingly.

Other inputs to the micro-computer are signalled by door switches, the timer / programmer unit and an air flow checking pressure switch.

The oven fan, cooling fan, and lamps are operated at mains voltage, the solenoid valves, and controls at 25V. The igniter high voltage coils are mounted on the main PCB.

Upon applying mains voltage, the micro-computer makes a series of checks of the air flow and flame detector before allowing start up.

Electrical faults

These may be either component failure or wiring / connector faults. Should any disconnections be made, it is important that they be re-connected exactly as before or the computer will lock out; poor connections are the most common fault. It is most important that earth wires (green) are all connected and earth screws tight.

There are two forms of micro-computer lockout

Hard lockout (HLO); for instance, air flow failure. This is indicated by the green lamps and red indicator dials of both ovens flashing alternately left / right. The cooling fan may continue to run for a while. Hard lockout can only be cancelled by turning off the mains electricity supply.

Soft lockout (SLO), for instance, re-ignition failure, will cause the green lamp and red indicator dial of the main oven cavity to flash - the cooling fan may run on, the oven fan will not run on. To cancel soft lockout, turn off the control knob.

Should the oven temperature not reach 40°C within approximately four minutes, the micro-computer will consider that a fault has occurred and go to lockout.

FAULT FINDING

Typical faults assuming all wiring is correct
(ensure programmer is set to manual):

Symptom	Fault
HLO on switching On mains	Component fault on main PCB, incorrect wiring
HLO on turning On oven/grill	Fault on control board / potentiometer, incorrect wiring, open circuit solenoid.
Oven start up, burner lights and immediately goes out, ready light on	Short circuit thermistor assembly. Note: at room temperature, thermistor resistance is approximately 100 k Ω .
Oven fails to ignite (check that electrode sparks correctly)	<ol style="list-style-type: none"> 1. Incorrectly positioned or open circuit spark electrode (note both grill and oven electrodes must be connected). 2. Faulty solenoid valve. 3. Gas not at appliance. 4. Blocked injector jet.
Oven goes out before set temperature is reached	<ol style="list-style-type: none"> 1. Incorrectly adjusted spark electrode (low flame current). 2. Low gas pressure. 3. Incorrectly positioned potentiometer or indicator disc. 4. If oven goes out after approximately 4 mins, this is due to a disconnected or open circuit thermistor.
Oven fails to re-ignite after set temperature is reached	<ol style="list-style-type: none"> 1. Incorrectly set spark electrode. 2. Low Gas Pressure.
Oven fan fails to start burner does not light	<ol style="list-style-type: none"> 1. Open circuit in programmer. 2. Component failure on main board 3. Component failure at control board.

FAULT FINDING

Symptom	Fault
Oven fan does not start burner lights, oven lamp lights	Faulty fan or connections.
Oven fan does not start lamps do not light	Component failure on main board.
Cooling fan fails to start 'ON' LED fails to light cooling fan fails to start	<ol style="list-style-type: none"> 1. Faulty fan. 2. Faulty programmer. 3. Faulty component on either board. 4. Faulty mains transformer. 5. Miss set or faulty potentiometer on control board. 6. Faulty transformer or mains supply. 7. Faulty microswitch on control board.
Temperature exceeds set level	Damaged or disconnected thermistor probe. Oven goes to HLO after four / five minutes.
Appliance will not work, green lamp & red indicator dial for both ovens flash together	Faulty micro-computer.

Grill faults are generally similar to those listed for the oven.

If the cooling fan starts and runs, the electrodes should spark and the solenoid valves can be heard to open. If the spark electrodes are correctly positioned and no spark occurs, there may be an air detector pressure switch fault, one faulty solenoid valve or no gas supply.

SERVICING INSTRUCTIONS

Before servicing - disconnect the gas and electric supplies.

After servicing - Check for gas soundness.

Note: The control system only allows gas to flow when the back panel is in place and fully screwed down. Oven or grill should only be operated with all panels in place.

1. Facia glass panel

- Remove appliance from housing (2).
- Remove the top cover plate.
- The glass facia is secured at both ends by a single screw.
- Note:** The programmer is held on the rear of the glass facia by high temperature adhesive tape.

2. Remove appliance from housing


- Disconnect the electricity supply.
- When handling the appliance, care should be taken to ensure the trim is not damaged.
- If the appliance is secured into the housing with screws through the front frame, open the door and unscrew the 4 corner screws.
- Grasp the bottom of the frame, pull forward and out onto a suitable surface.
- Disconnect the gas supply inlet from the rear wall.

3. Door glass panel(s)

- Open the door and insert 2 screws through the inner holes in the door hinge arms (to stop the door from springing up when you remove the outer glass panel).
- Slide out the inner glass panel.

- Remove 2 plastic inner glass stops at bottom of door extrusion.
- The door foot can be withdrawn completely from the door extrusion.

Important: The inner glass panel must be replaced the right way up as shown (the reflective side faces inwards) and also pushed fully into the stop position.

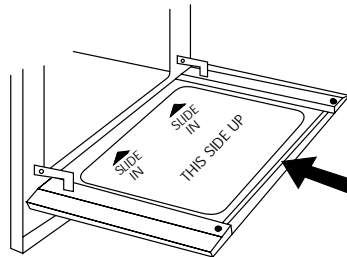

4. Oven Light bulb(s)

- Remove the oven shelves.
- Grasp the back edge of the light cover and pull forward.
- Unscrew the bulb.

5. Top and rear compartment access

- Remove the appliance from housing unit (2).
- Unscrew and remove top plate screws.
- For rear compartment access, remove top panel first. Slide rear panel sideways off the inlet valve block feeding the supply cord through the grommet.

6. Oven igniter electrode

- Remove the fan cover.
- Remove 2 screws holding electrode.
- Pull electrode out.
- Push back sleeving and disconnect electrode lead.

SERVICING INSTRUCTIONS

7. Oven burner fan unit

- a. It is easier to lift out the fan cover if you first remove the oven shelf runners:
 - (i) Pull the bottom edge away from the oven side.
 - (ii) Disengage the runners from the hanging holes.
- b. From the inside of the oven, unscrew the 4 screws which secure the fan cover to the back of the oven.
- c. Remove 2 screws from electrode bracket.
- d. Remove rear service panel (5).
- e. Prevent motor from rotating whilst unscrewing burner from within oven.

Note: Left hand thread, turn clockwise to unscrew.

8. Micro-computer

- a. Gain access to the rear chamber (5) and disconnect all wire connectors from PCB.
- b. Remove PCB earthing screws found at the top RH and bottom LH corners.
- c. Ensure the distance tube around the earthing screws is retained and replaced when refitting the PCB, as it will not work without them.
- d. The complete board can now be removed by disconnecting the insulating stand-offs.

Note: It is practically impossible to exchange individual components from the computer board. A complete new board should be substituted ensuring correct software is installed.

9. Door switch

- a. Remove appliance from housing (2).
- b. Remove top panel and RHS panel.
- c. Unscrew the screws which secure the door switch and its bracket to the oven door frame.

10. Cooling fan

- a. Remove appliance from housing (2).
- b. Gain access to rear compartment (5).
- c. Disconnect the fan leads from the terminal block.
- d. Unscrew the 4 screws which secure the fan mounting bracket.
- e. Remove the 4 screws which secure the fan to the mounting bracket.

11. Oven light fitting(s)

- a. Remove appliance from housing (2).
- b. Remove the top and side panels.
- c. Remove the leads from the back of the light fitting.
- d. Squeeze in the metal retaining clips to release the fitting from the oven side.

12. Grill burner

- a. Remove appliance from housing (2).
- b. Unscrew the top and rear panel securing screws.
- c. Remove the top and rear panels.
- d. Detach the spring clip at the injector block.
- e. From the top, remove the grill burner securing screws & lift out the grill burner complete with cover.

13. Ceramic grill glass

- a. Gain access to top compartment (5).
- b. Remove the grill burner (12).
- c. Lift up all the tabs which secure the grill glass.
- d. Replace glass and bend tabs down.

14. Grill igniter electrode

- a. Remove the grill burner (12).
- b. Unclip the electrode wire from the control board.

Important: The electrode connection must be to the correct connector at the control board.

SERVICING INSTRUCTIONS

15. Programmer / clock

- Remove appliance from housing.
- Remove top panel.
- Remove fascia glass.
- The clock can now be disconnected and disengaged by cutting through the adhesive tape.

16. Solenoid Block


- Remove appliance from housing.
- Remove top, rear and right side panels.
- Disconnect three compression pipe connections.
- Disconnect electric socket from the control board.
- Remove 4 screws from side of appliance securing the block.

17. Pressure Switch

- Remove appliance from housing.
- Remove top and rear panels.
- The pressure switch can now be disconnected and the two securing screws removed.

18. Door seal

- Pull off the old seal.
- Slacken screws in the stainless steel flue cover at the front of the oven/grill roof to ease insertion of the seal.
- Partly open the door to obtain best access for the seal all around the oven/grill.
- Locate the middle of the new seal and start to push into place at the middle of the bottom edge of the oven/grill cavity.
- Make sure the narrow gap goes to the inside, and locates onto the oven cavity.
- Do not stretch** the seal.
- Make sure the seal is fitted correctly as shown, and cut to fit.
- Re-tighten the screws in the flue cover.

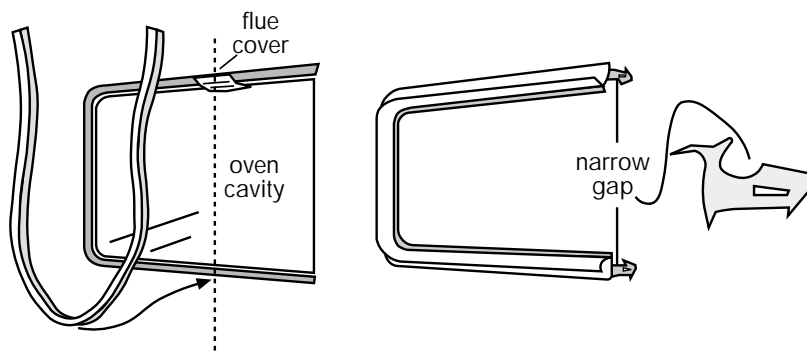

TECHNICAL DATA

Data Badge

Front Frame

Gas Category

This appliance is for use on either Natural Gas only or LP Gas only. This is clearly marked on the data badge.

Natural Gas - I_{2H}, LP Gas - I₃₊

Pressure Test Point

Top of inlet block

Pressure Setting

G20 Natural Gas @ 20 mbar

G30 Butane @ 28-30 mbar

G31 Propane @ 37 mbar

Ignition

Automatic Spark

Oven / Grill Light(s)

4 x 25W (2 in each oven)

Electrical supply

230 - 240V ~ 50Hz

Grill

Burner: Surface combustion behind ceramic glass. *Spark Gap:* 3 - 4mm.

Top Oven

Burner: Rotary surface combustion.

Main Oven

Burner: Rotary surface combustion.

Appliance class

Class 1, freestanding appliance

Countries of Destination

GB - Great Britain, IE - Ireland

Gas	Burner	Nominal Rate Q _n	Grammes per hour		Injector size
			Propane	Butane	
Natural Gas	Grill	3.2kW	-	-	Amal Size 230
	Top Oven	1.85kW	-	-	Amal Size 130
	Main Oven	2.5kW	-	-	Amal Size 180
	Total heat input	ΣQ _n 5.7kW	-	-	-
LP Gas	Grill	3.2kW	229 g/h	233 g/h	Amal Size 95
	Top Oven	1.8kW	129 g/h	131 g/h	Amal Size 55
	Main Oven	2.3kW	164 g/h	167 g/h	Amal Size 75
	Total heat input	ΣQ _n 5.5kW	393 g/h	400 g/h	-

STOVES CUSTOMER CARE

In case of difficulty within the UK and Northern Ireland, please call
STOVES Customer Care Centre Helpline on

0151 432 7838

When you dial this number you will hear a recorded message and be given a number of options. This indicates that your call has been accepted and is being held in a queue. Calls are answered in strict rotation as our Customer Care Representatives become available.

Opening Hours for Customer Care Centre

Monday to Friday	8am - 8pm
Saturday	8.30am - 6pm
Sunday	10am - 4pm

Enter appliance numbers here for future reference:

Model No
<input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/>
Serial No
<input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/>

Please ensure you have the above details (Model No and Serial No) to hand when calling Stoves Customer Care. They are essential to booking your call.

Outside the UK and Northern Ireland, refer to your local supplier.

